

**Maintenance: Normal Service 45000 MI or 72000 KM**

**Check**

- (S) Brakes  
*Inspect brake linings/drums and brake pads/discs*

**Inspect**

- (S) Automatic Transmission Fluid
- Ball Joint Dust Cover, Lower
- Ball Joint Dust Cover, Upper
- Ball Joint, Lower
- Ball Joint, Upper
- Brake Drum
- (S) Brake Hose  
*Inspect brake hoses and lines*
- Brake Pad
- Brake Rotor/Disc
- Brake Shoe
- (S) Constant Velocity Joint Boot
- (S) Differential Fluid
- (B) Exhaust System  
*Inspect exhaust pipes and mountings*
- (S) Steering  
*Inspect the vehicles steering gear box, steering wheel, linkage and boots. Inspect steering gear box and steering linkage*
- (S) Steering and Suspension  
*Inspect ball joints and dust covers*

**Replace**

- (B) Oil
- (B) Oil Filter, Engine

**Rotate**

- (S) Tires

-----  
(S) = Service Warranty Requirement  
(E) = Emission Warranty Requirement  
(B) = Both Service and Emission Warranty Requirement