



Testing and Inspection

ON-VEHICLE INSPECTION

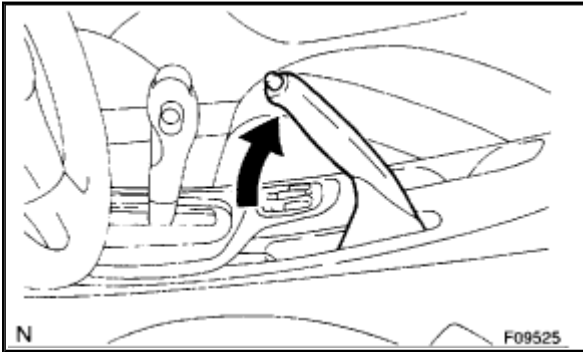

1. CHECK PARKING BRAKE LEVER TRAVEL Pull the parking brake lever all the way up, and count the number of clicks. Parking brake lever travel at **196 N (20 kgf, 44.1 lbs)** : **5 - 8 clicks** If incorrect, adjust the [parking brake](#).

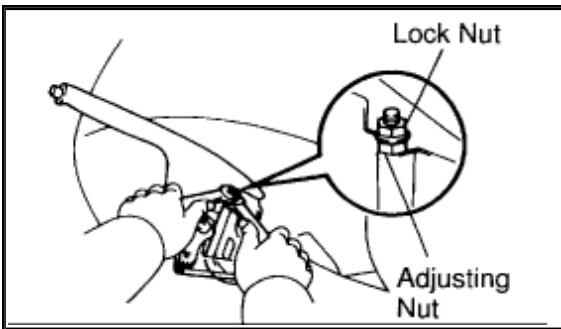

2. IF NECESSARY, ADJUST [PARKING BRAKE](#) **HINT:** Before adjusting the [parking brake](#), make sure that the rear [brake shoe](#) clearance has been adjusted.
 - a. Remove the console box.
 - b. Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
 - c. Tighten the lock nut. Torque: **5.4 Nm (55 kgf-cm, 48 inch lbs.)**
 - d. Install the console box.