

Maintenance: Normal Service 15000 MI or 24000 KM

Check

- (S) Brakes
Inspect brake linings/drums and brake pads/discs

Inspect

- (S) Automatic Transmission Fluid
- Ball Joint Dust Cover, Lower
- Ball Joint Dust Cover, Upper
- Ball Joint, Lower
- Ball Joint, Upper
- Brake Drum
- (S) Brake Hose
Inspect brake hoses and lines
- Brake Pad
- Brake Rotor/Disc
- Brake Shoe
- (S) Constant Velocity Joint Boot
- (S) Differential Fluid
- (B) Exhaust System
Inspect exhaust pipes and mountings
- (S) Steering
Inspect the vehicles steering gear box, steering wheel, linkage and boots. Inspect steering gear box and steering linkage
- (S) Steering and Suspension
Inspect ball joints and dust covers

Replace

- (B) Oil
- (B) Oil Filter, Engine

Rotate

- (S) Tires

(S) = Service Warranty Requirement
(E) = Emission Warranty Requirement
(B) = Both Service and Emission Warranty Requirement