

Maintenance: Severe Service 30000 MI or 48000 KM

Check

Brakes

Inspect linings/drums and pads/discs

Inspect

Ball Joint Dust Cover, Lower

Ball Joint Dust Cover, Upper

Ball Joint, Lower

Ball Joint, Upper

Body and Frame

Inspect nuts and bolts on chassis and body Inspect the nuts and bolts on the chassis and body.

Brake Drum

Brake Hose

Inspect Brake hoses and lines

Brake Line

Brake Pad

Brake Rotor/Disc

Brake Shoe

Constant Velocity Joint Boot

Drive Belt

Inspect non-ribbed drive belts

Drive/Propeller Shaft

Inspect the vehicles driveshaft boots.

Exhaust System

Inspect exhaust pipes and mountings

Fuel Delivery and Air Induction

Inspect fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses

Fuel Supply Line

Inspect the vehicles fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses.

Steering

Inspect steering gear box Inspect the vehicles steering gear box. Inspect the vehicles steering wheel, linkage and boots.

(S) Steering and Suspension

Inspect ball joints and dust covers, inspect steering linkage

Replace

(S) Air Filter Element

(S) Automatic Transmission Fluid

(B) Coolant

(S) Differential Fluid

Manual Transmission Fluid

(B) Oil

(S) Oil Filter, Engine

Reseal

Fuel Filler Cap

Replace fuel filler cap gasket

Rotate

Tires

(S) = Service Warranty Requirement

(E) = Emission Warranty Requirement

(B) = Both Service and Emission Warranty Requirement